



Xerox-How to walk customer through accessing ip address at the panel.

1

If your IP address does not show up on the front page of your operation panel here, then Click "Device"

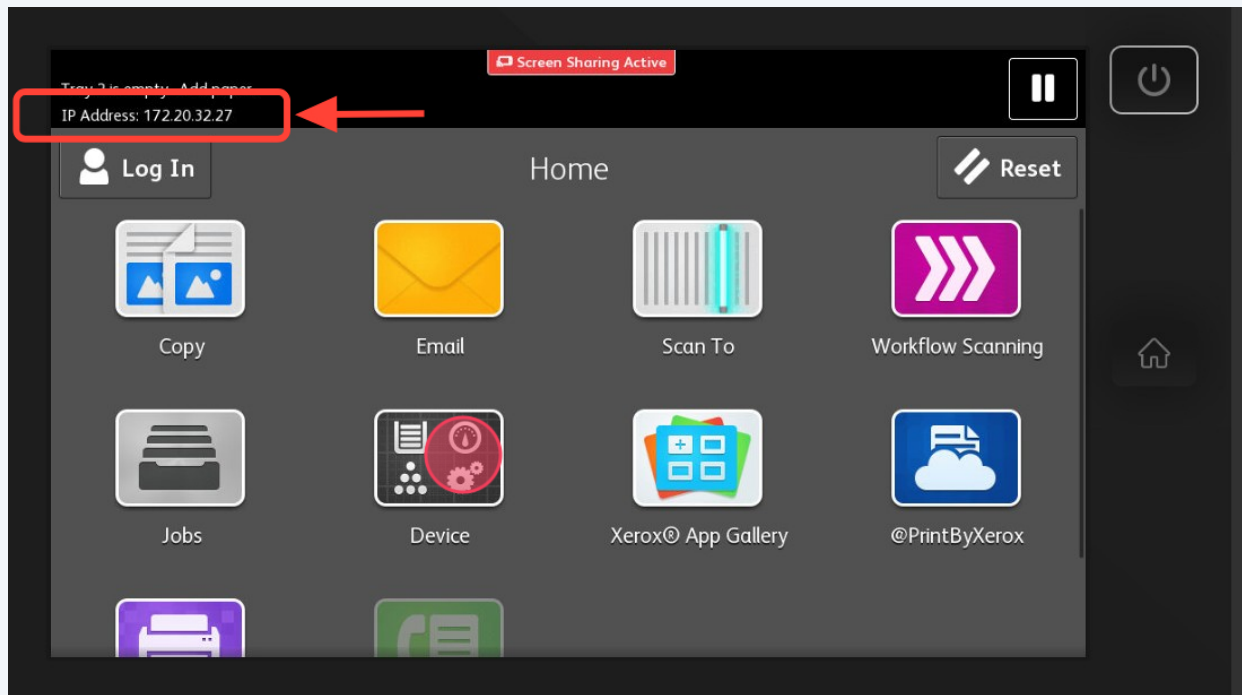


2 Click "Log In"

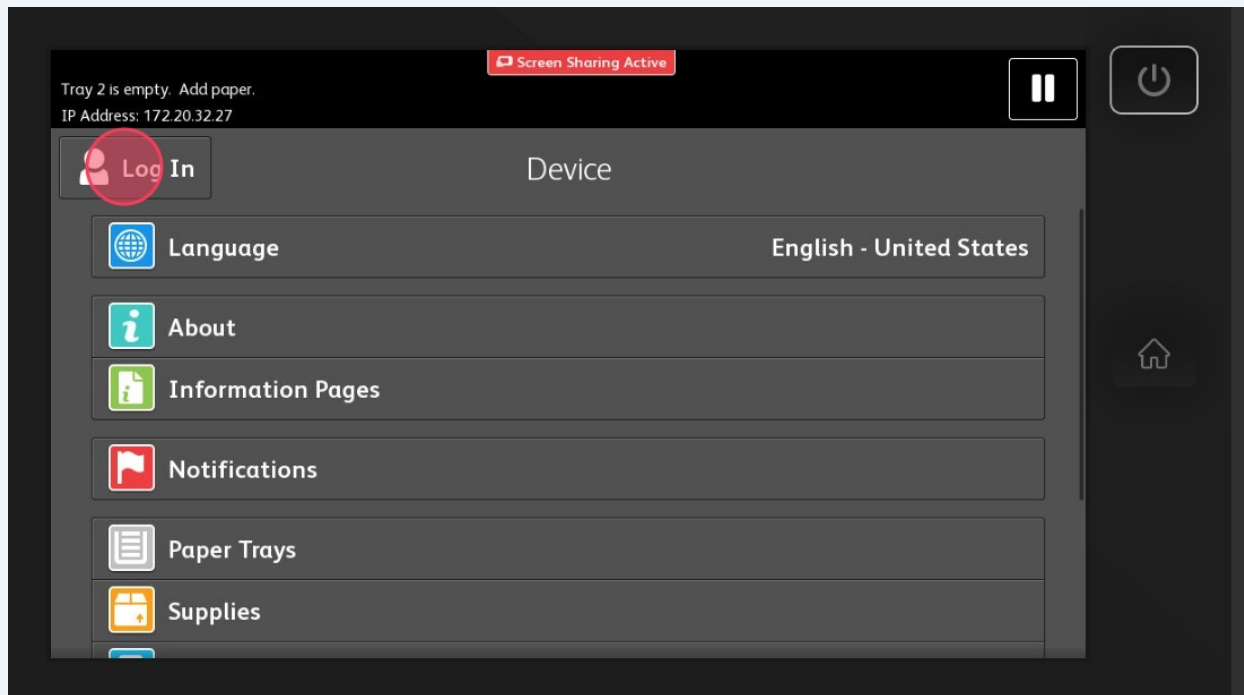


3 Type "admin" for username

4 Type "xerox" for password. If that password does not work then the default password has been set to either "1111" or the serial number of your printer.


5 Click "Done"

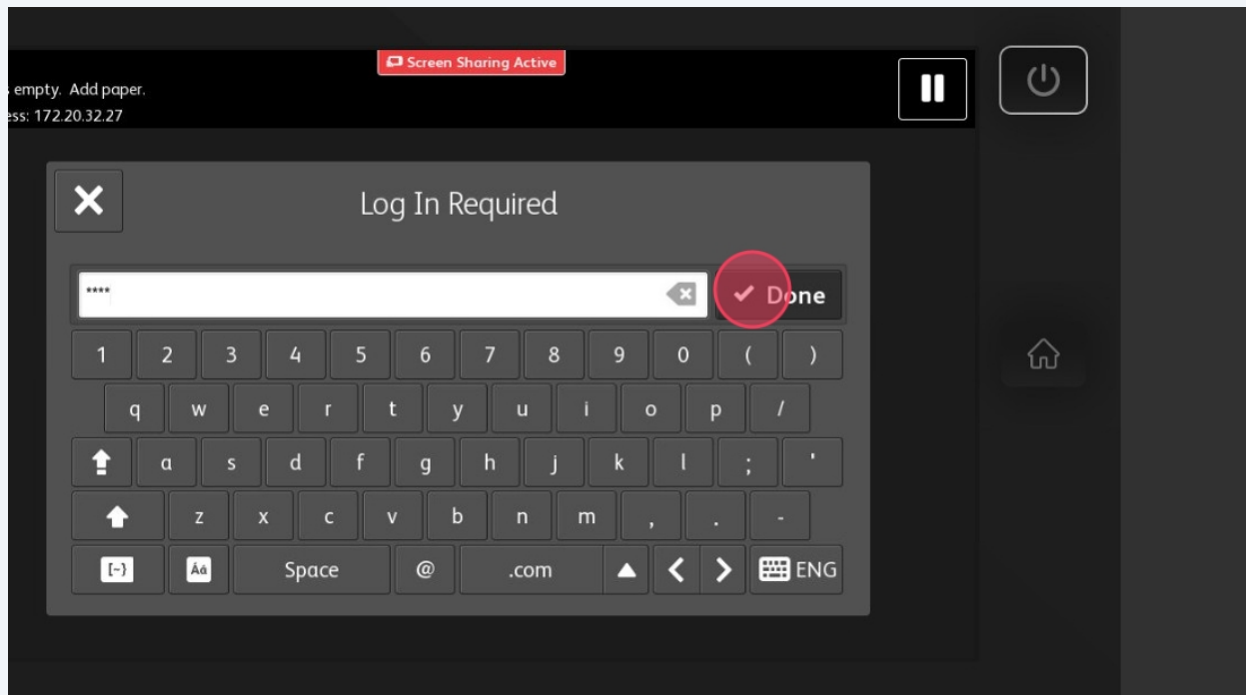


6 Click "Tools"

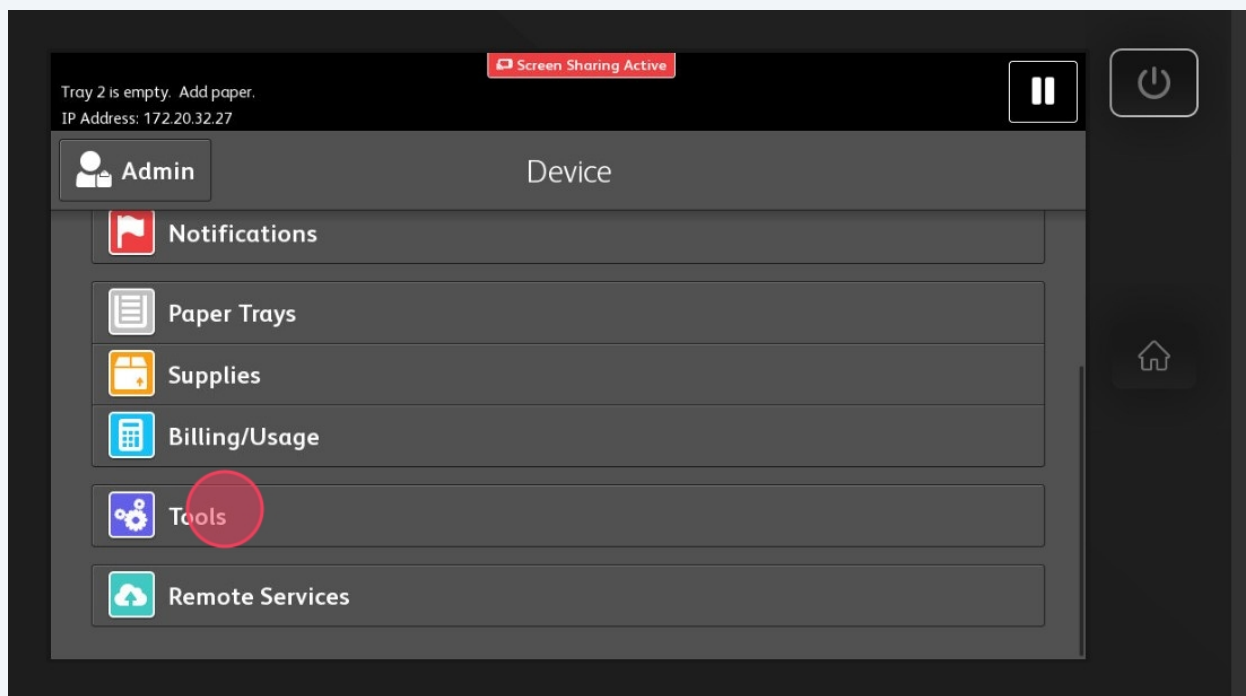


7 Click "Network Settings"

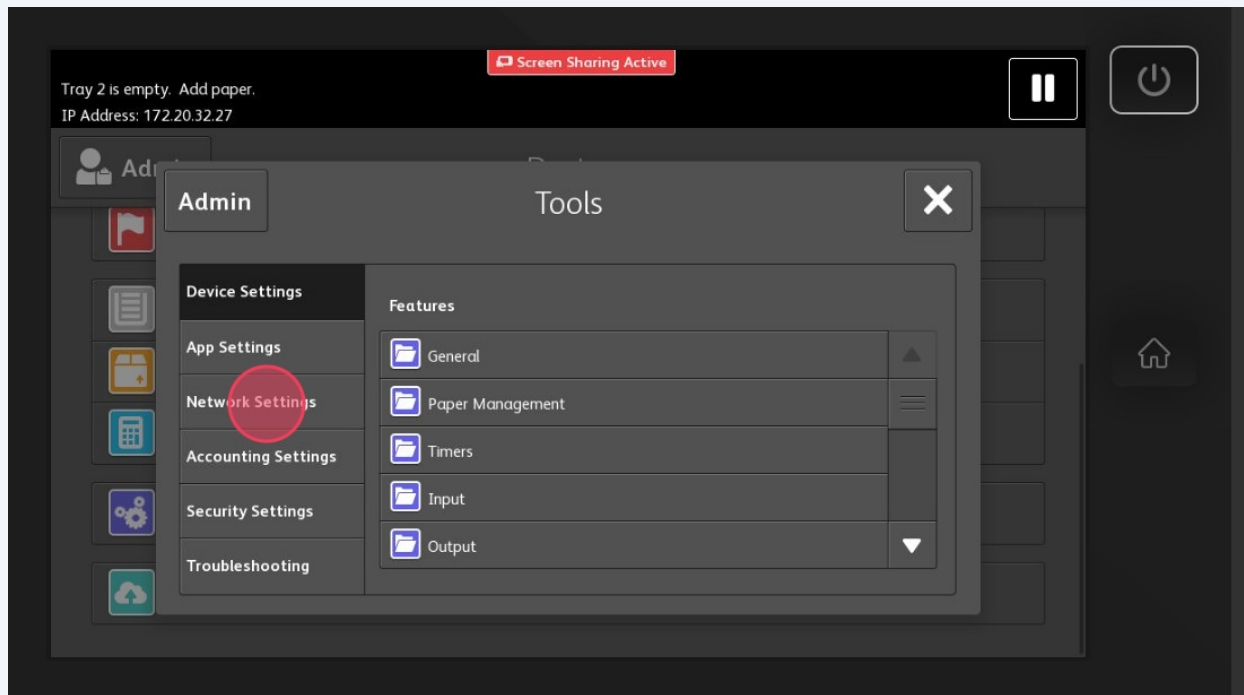

8 Click "TCP/IP Settings."

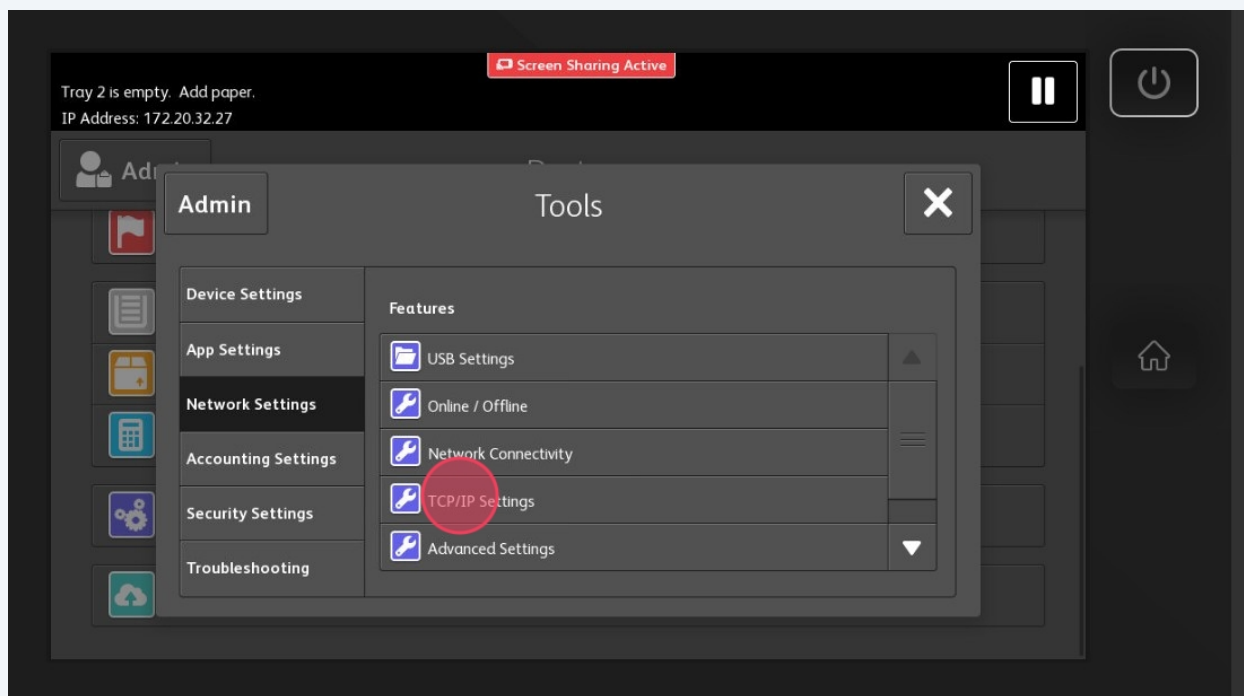

9 Click "Dynamic Addressing (DHCP)."

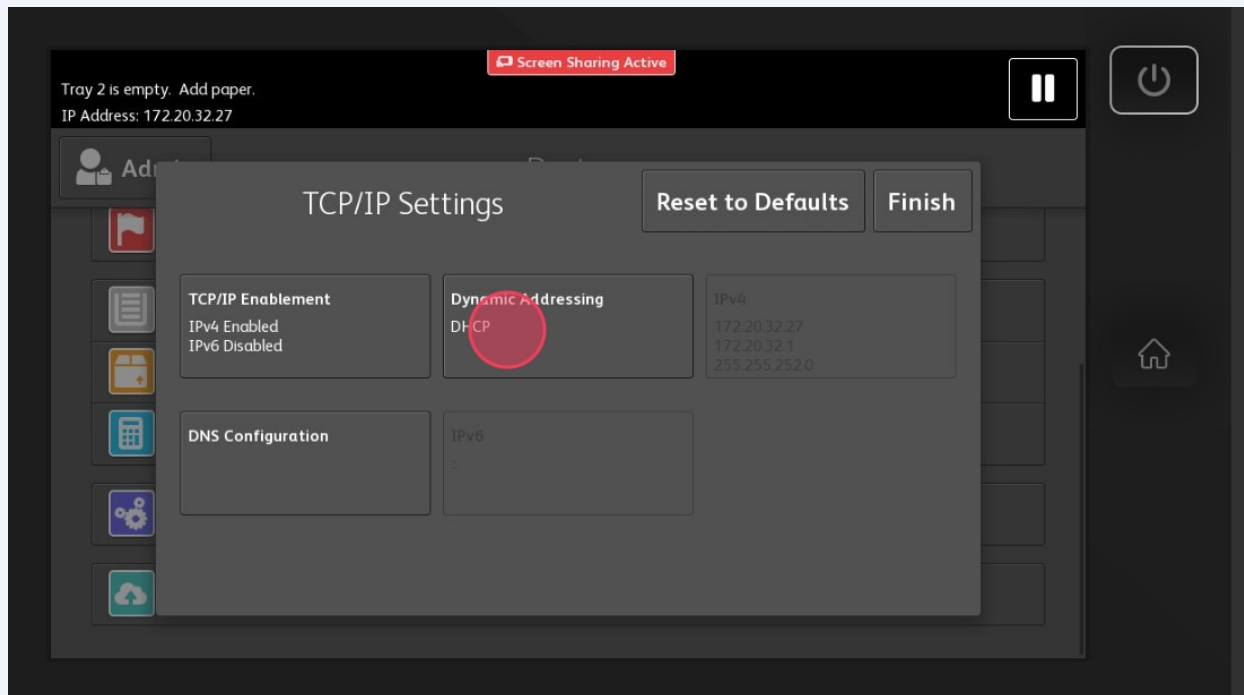

 Tip! You will see the Machine IPv4 address at this step